


Spare parts / Accessories

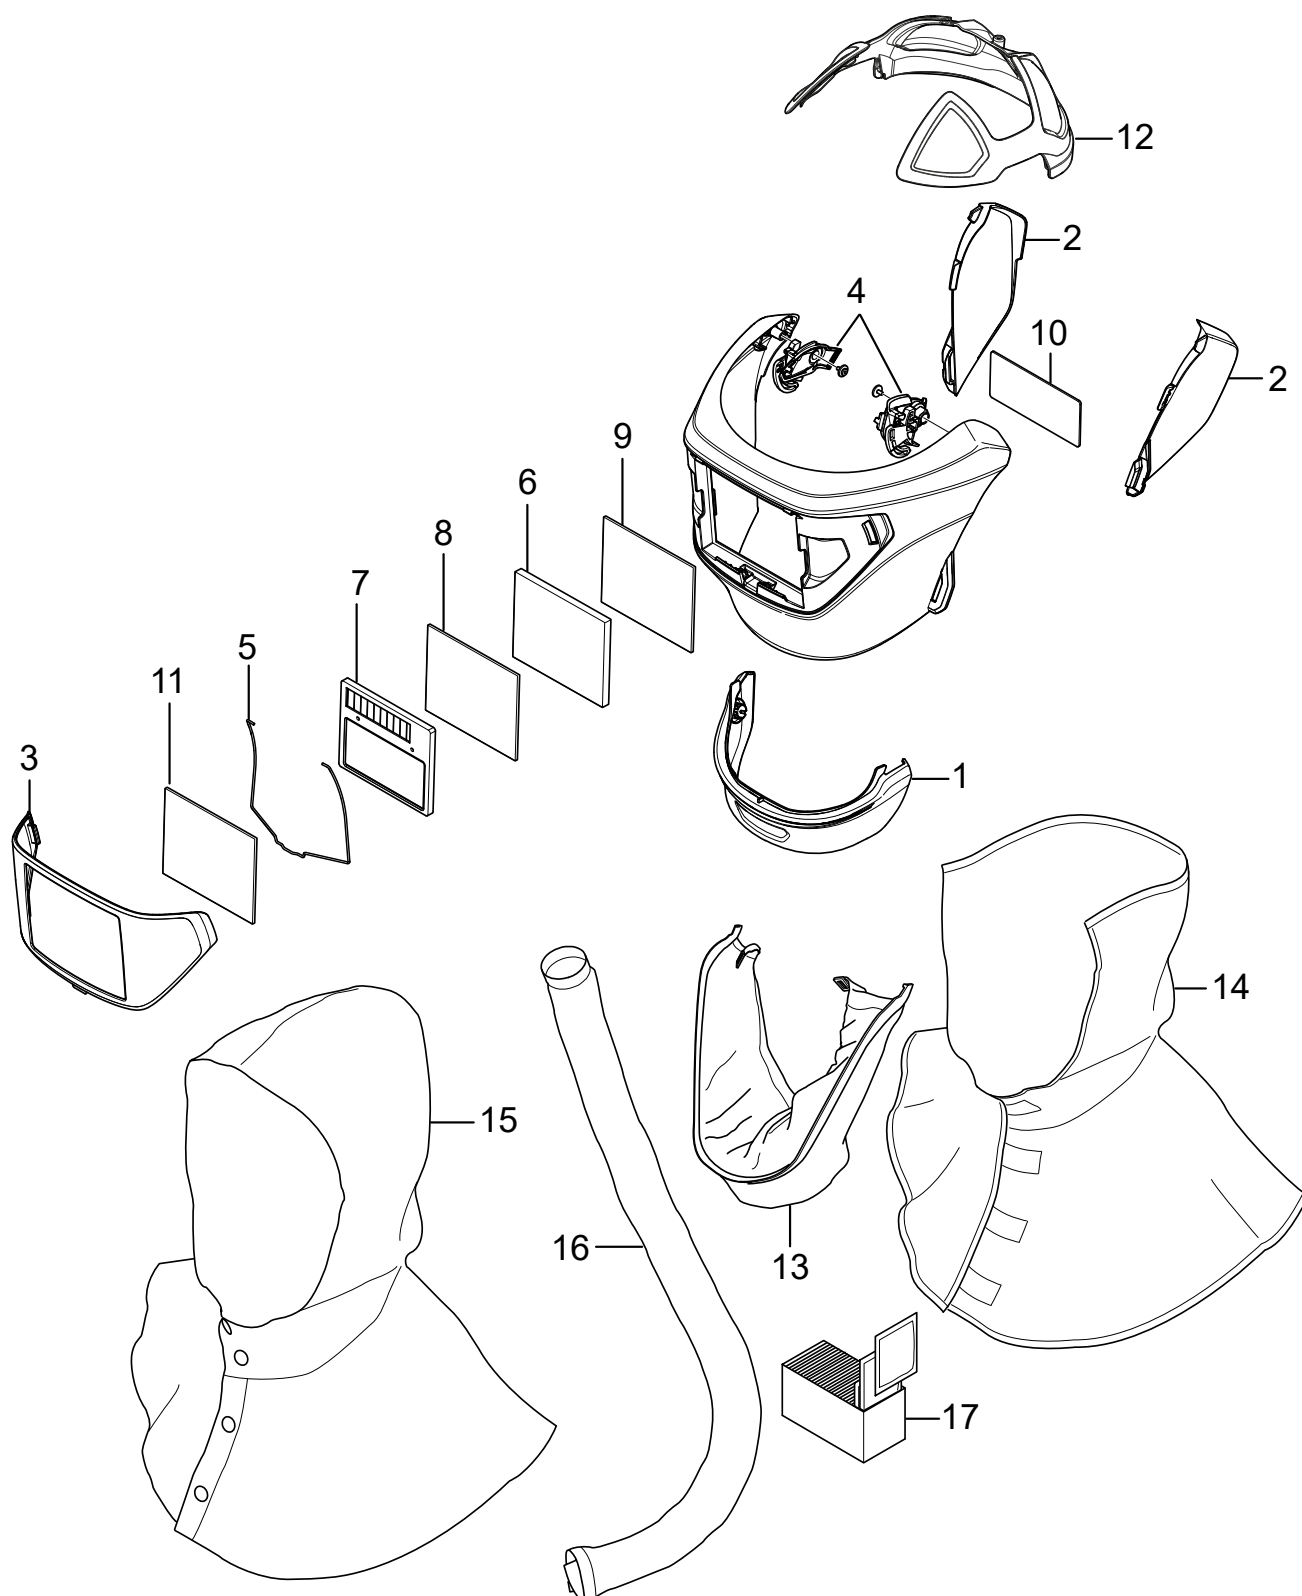

No.	Description	Ordering No.
1.	Valve cover SR 574	R06-0484
2.	Ear cover, right+left	R06-0483
3.	Protective lens holder	R06-0479
4.	Fixation/lower mechanism complete, right+left	R06-0621
5.	Spring for welding filter	R06-0622
6.	Welding filter, shade No. 8, SR 59008	T06-4001
	Welding filter, shade No. 9, SR 59009	T06-4002
	Welding filter, shade No. 10, SR 59010	T06-4003
	Welding filter, shade No. 11, SR 59011	T06-4004
	Welding filter, shade No. 12, SR 59012	T06-4005
	Welding filter, shade No. 13, SR 59013	T06-4006
7.	Welding filter, EN 3/10, SR 59005	T06-4007
	Welding filter, EN 3/11, SR 59006	T06-4008
	Welding filter, EN 4/9-13, SR 59007	T06-4009
	Welding filter, EN 4/5-13	R06-4508
8.	Inner protective lens for auto filter	R06-4009
	Inner protective lens for R06-4508	R06-4509
9.	Inner protective lens for toughened mineral glass filter	R06-4008
10.	Correction lens, dptr 1,0, SR 59014	T06-4010
	Correction lens, dptr 1,5, SR 59015	T06-4011
	Correction lens, dptr 2,0, SR 59016	T06-4012
	Correction lens, dptr 2,5, SR 59017	T06-4013
11.	Protective lens PC	R06-4008
12.	Bump cap	T06-0602
13.	Face seal, flame retardant	T06-0611
14.	Neck cover, flame retardant	T06-0610
	Note! T06-0602 is required	
15.	Protective hood	T06-4014
16.	Protective hose for the breathing hose	T06-4016
17.	Cleaning wipes SR 5226, box of 50	H09-0401